



Canon PowerShot SX280 HS AF Assist Lamp Replacement

Replacing the lamp light to alert you when the picture shall be taking and being focused and ready for a picture

Written By: Osmand A Munoz




Step 1 — AF Assist Lamp




- Camera Lamp light

Step 2

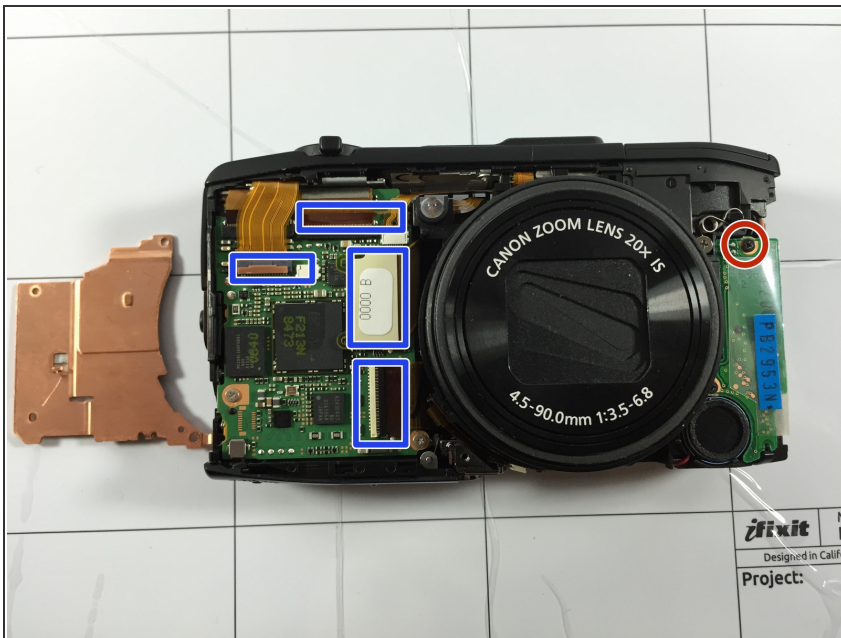


- After removing the whole chassis of the camera. make sure you all the tabs are undone from the motherboard

Step 3

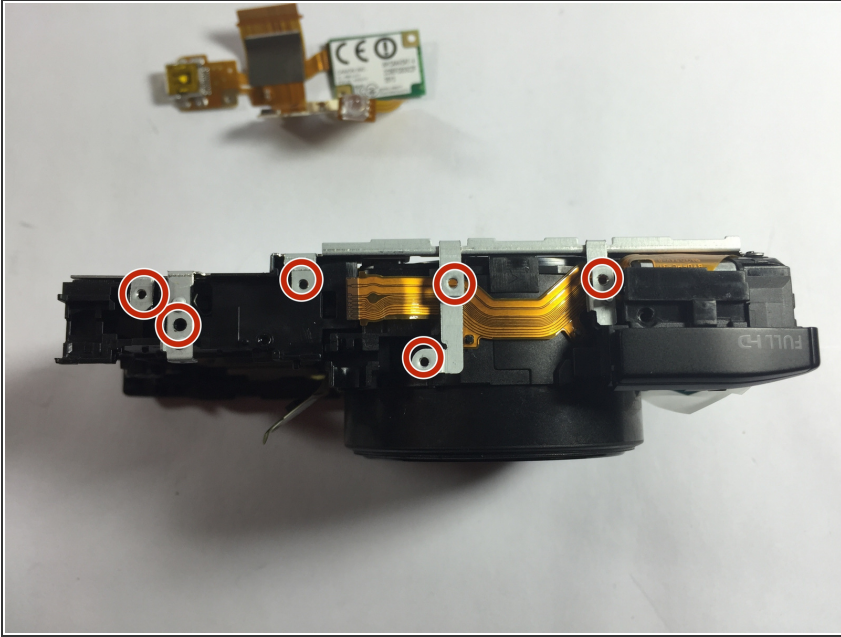


- remove the screws on top where the camera is held in place.

Step 4

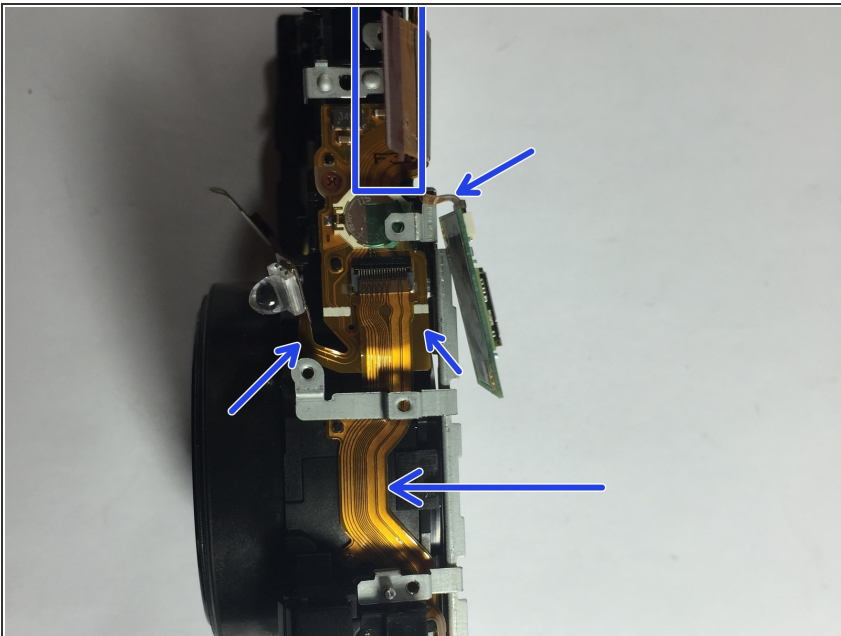


- the tabs after bring removed slide out with the chip with it. it is attached to the GPS

Step 5

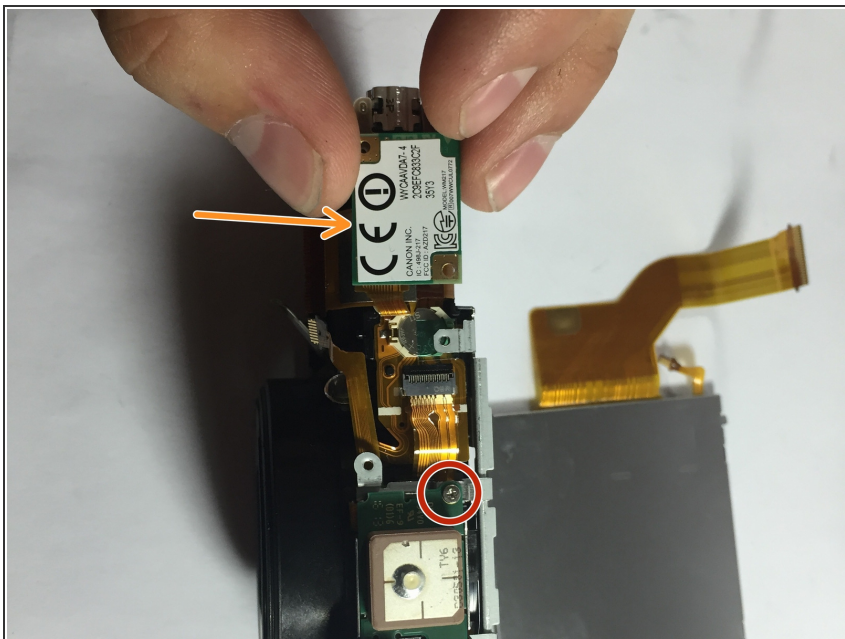

- remove the wifi chip and unscrew the last screw

Step 6

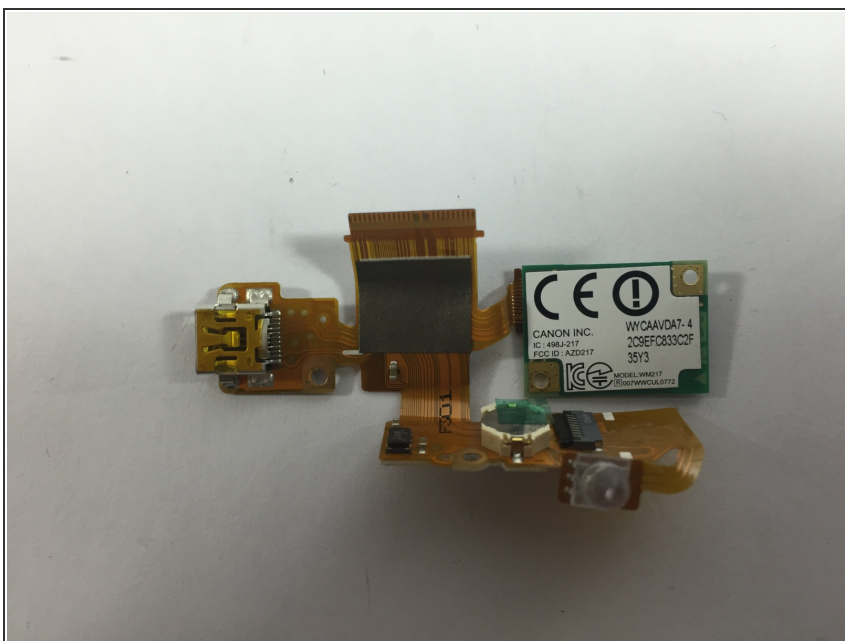

- Remove all the screws around it and it should come out

To reassemble your device, follow these instructions in reverse order.